



## Operating instructions

### LEUCHTIE® Pro Easy Charge

### LEUCHTIE® Premium Easy Charge


Easily rechargeable via USB charging station

#### Activation process

Before using the LEUCHTIE for the first time please remove the transport protection (insulation cap). It is the red stopper located at the opposite side of the size sticker.


#### Opening:

1. Separate the tube from the battery pack by pulling them apart with slight angular movements, taking care not to use excessive force (1). In doing so, hold the silicone sleeve onto the battery compartment.
2. Remove the red insulation cap (2) and discard.

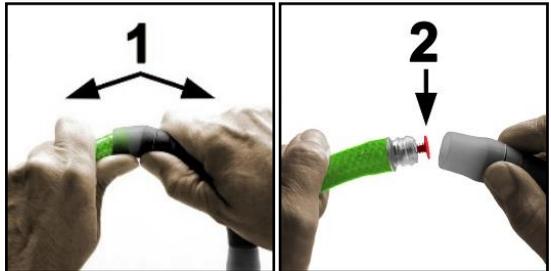


#### Fix the attachment loop:

3. In order to secure the LEUCHTIE to a collar or harness with the enclosed fixation loop, pull the open end of the tube through both transparent rubber rings of the loop (3).

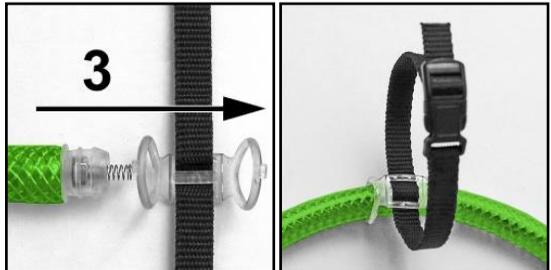


#### Closing:

4. Insert the end of the tube straight into the battery compartment. Be careful not to bend the contact spring.
5. Press the battery pack and the tube firmly together as far as possible, until they are closed completely. **IMPORTANT:** There must be no gap between the battery pack and the tube (see also figures page 3).

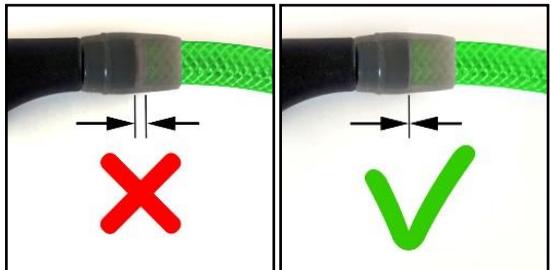

#### Turning the LEUCHTIE on and off

Simply slip the LEUCHTIE over the dog's head and it will turn on automatically by sensor as soon as the battery pack points downwards and the LEUCHTIE is in motion. When the battery pack faces upwards the LEUCHTIE will turn off slowly after approx. one minute. Therefore, suspend the LEUCHTIE e.g. on a hook for storage.

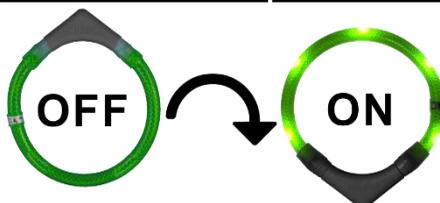

## Important notes for recharging

Before using your LEUCHTIE for the first time, please charge it until the red and the green LED of the charging station light up together.

### Charging the batteries:

Please use only the provided original LEUCHTIE charging station.

- Place the charging station flat on a level surface with the charging contacts facing upwards. Connect the USB cable to a USB power source (e.g. USB power supply unit or USB socket of a car or PC, etc.). The **green** LED of the charging station indicates that it is ready for use.
- Place the charging contacts of the LEUCHTIE on the charging station. The magnetic charging contacts will automatically align. The **red** LED shows that the batteries are recharging.
- The **green** and the **red** LED light: The batteries are charged.



### We recommend:

Charge the batteries as early as possible: once a week overnight until the **green** LED of the charging station lights up together with the **red** one. The robust NiMH batteries have *no* memory effect.

### Early recharging offers the following advantages:

- shorter loading times
- maximum possible burn time due to fully charged batteries
- maximum brightness of your LEUCHTIE (Pro Easy Charge model)
- optimal protection of the batteries (more charging cycles)

### Tips:

In order to achieve the best results please recharge at room temperature (5 – 25 °C).

The charging process can easily be interrupted, e.g. for a walk. Please place it again on the charging station until the **green** and the **red** LED of the charging station light up.

The charging contacts of the battery pack only conduct electricity during the charging process. The contacts can thus be short-circuited or held under water without creating any danger for dogs or humans. The battery pack is 100% waterproof.

Please make sure that the battery pack is clean and dry when placing it on the charging station.

If the LEUCHTIE is not used for a longer period of time (e.g. in summer), please fully charge the batteries before taking it out of operation. Store the LEUCHTIE in an upright position so that it does not turn on. In case of charging problems check and clean the magnetic contacts. Metal parts sticking to the magnets can be removed easily using adhesive tape.

The batteries can be replaced if necessary.

Detailed information including instructions can be found on the internet at [www.leuchtie.com/faq](http://www.leuchtie.com/faq)


## Correct connection of battery compartment and light tube

Please always ensure a correct connection between battery compartment and light tube. Otherwise the connection may open too easily or loose contacts may occur.

### Assemble the LEUCHTIE correctly:

The silicone sleeves are located on both sides centrally on the transition from battery part to light tube and do not show any defects.


- A) The LEUCHTIE is completely closed up to the stop: there is no gap between the light tube and the battery compartment.
- B) The sleeve end with the annular bead sits on the battery pack on both sides.

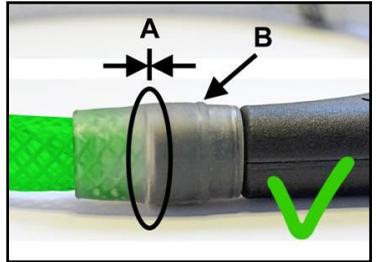

### Possible sources of error


#### LEUCHTIE is not completely closed:

- The light tube is not completely inserted into the battery compartment:
- A gap can be seen between the light tube and the battery pack.

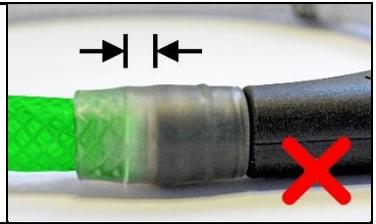


#### Incorrectly attached silicone sleeves:

- The sleeve is not pulled all the way to the stop on the battery part - it sits too far on the light tube.

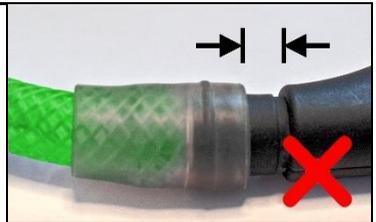

- The sleeve is pulled beyond the stop of the battery part - it is too far on the battery compartment.

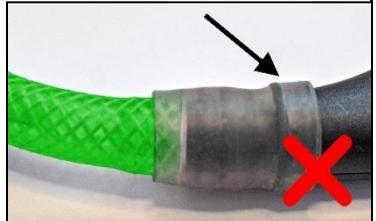


- The sleeve is attached the wrong way round. The sleeve end with the ring bead must be on the battery compartment.



### Kinked battery compartment:

- The edge of the battery compartment has been accidentally kinked when the light tube was inserted into the battery compartment.

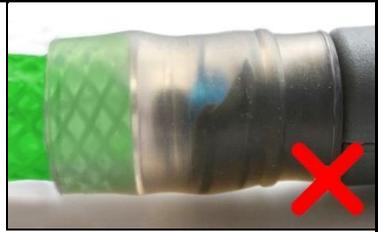

- As a result, the light tube cannot be inserted completely into the battery part up to the stop.




- In comparison, a correctly seated battery compartment with the sleeve attached.



### Bent or loose contact springs:


- The springs protruding from the ends of the light tube on both sides must be firmly screwed into the nut and must not be bent or kinked.
- Defective contact springs can be easily replaced if necessary: [www.leuchtie.com/faq-spring](http://www.leuchtie.com/faq-spring)

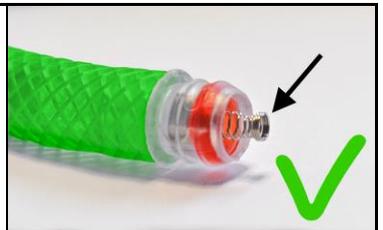

### Battery pack inserted the wrong way round:

Lay down the battery compartment and the light tube as shown and connect both as follows:

- the end of the tube marked red with the red marking in the battery compartment
- the end of the tube marked blue with the blue marking in the battery compartment

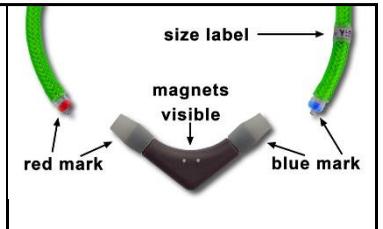

## Spare parts & repair service

If required, you can obtain rechargeable batteries, inexpensive spare parts and useful accessories from your dealer or directly from us: [www.shop.leuchtie.com](http://www.shop.leuchtie.com)

If, contrary to expectations, a case of damage occurs which you or your dealer cannot repair, we offer you the possibility of an uncomplicated repair at any time:

[www.leuchtie.com/service](http://www.leuchtie.com/service)

## Safety information

- Please use the LEUCHTIE only for its designated purpose.
- Do not attach a lead to the LEUCHTIE and avoid holding your dog by the LEUCHTIE. Too much force on the LEUCHTIE could cause the batteries, springs and other parts to fall out and get lost.
- LEUCHTIE is not a dog toy!  
The LEUCHTIE can be damaged and might open if it is used too heavily (e.g. throwing or vigorous biting). In this case, small parts such as batteries, contact springs, etc. can fall out and be lost or even swallowed by the dog, which may lead to serious injuries. If this happens please immediately contact a veterinarian, who can take the appropriate measures if necessary.
- Do not use the LEUCHTIE if malfunction or damage is apparent. We accept no liability for any further damage or loss.
- Make sure that no humidity gets inside the LEUCHTIE – especially when cleaning it or changing the batteries. When fully closed, the LEUCHTIE is protected against water and humidity very well. Should you notice humidity inside the LEUCHTIE, pull the tube and the battery pack apart with slight angular movements (see figure page 1) and let both parts dry completely. Avoid temperatures above 50°C.
- Do not dry or heat the LEUCHTIE in the microwave under any circumstances - the microwave radiation would destroy the electronics immediately.
- Do not disassemble, heat or short-circuit the built-in batteries.
- Swallowing the batteries can be fatal! For this reason, please keep both the batteries and the product out of reach of small children and your dog. In case a battery is swallowed, please seek medical/veterinary assistance immediately.

## Cleaning

Clean the LEUCHTIE in warm water and soap or mild detergent if required. Do not use aggressive or solvent-based cleaners! When cleaning the LEUCHTIE, please ensure that the silicone sleeves are closed properly to prevent humidity from entering.

## Warranty

Within the framework of the respective legally applicable warranty we will repair all defects, which can be proven to have been caused by material or manufacturing defects. Excluded from this warranty are all defects caused by improper use, non-observance of this manual, leaked batteries and wear from using the product. Further claims are excluded; there will not be any liability for consequential damages. Opening the product (except for activating and battery changes) and other interferences by unauthorized persons will automatically void the warranty. Repairs or the replacement of parts will not extend the original warranty.

**In case of a warranty claim, please contact the retailer from whom you purchased the product.**

### Manufactured in Germany by:

trends and more GmbH  
Hammerweg 123  
D-92637 Weiden  
UST-ID: DE 265028845

Phone: +49 961 470 8 440  
E-Mail: [info@leuchtie.de](mailto:info@leuchtie.de)  
URL: [www.leuchtie.de](http://www.leuchtie.de)  
WEEE: DE 23706136

## Disposal / Recycling / Labeling



This product meets the requirements of the Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of hazardous substances in electrical and electronic equipment.  
(CE7: LEUCHTIE Pro Easy Charge and CE8: LEUCHTIE Premium Easy Charge)



Please protect the environment and recycle this product. The product is labeled with the symbol of the crossed out waste bin, which means that it should be dropped off free of charge at a local collection point for recycling at the end of its useful life. Disposal in the regular waste is not permitted.



The used batteries cannot be disposed of with the regular household waste! Please dispose of them via the appropriate commercially available containers or drop them off at public collection points.