

# LEUCHTIE® Mini

## the innovative LED- light collar for small dogs



Thank you for choosing LEUCHTIE to enhance your and your dog's safety. For best performance and longevity please read and follow the instructions below.

Page 1: First activation

Page 2: Battery change

Page 3: Trouble shooting

Page 4: Safety info

### First start up/ activating

One of the batteries was put in the wrong way round as a transport lock in order to avoid that the LEUCHTIE switches on during the delivery.


This battery must be turned around for the initial activation.

- Pull off the tube's end which has the LEUCHTIE brand label on it from the angle by gently turning it.
- Remove the battery from the light collar and turn it around.
- Push the battery facing the negative end towards the LEUCHTIE in the light collar.
- In order to secure the LEUCHTIE to the collar with the enclosed fixation loop, pull the end of the open tube through both transparent rubber rings of the loop (see figure).
- Put the tube on the angle again.



### Switching on and off

LEUCHTIE is easily pulled over the dogs head and switches on automatically, if the battery compartment is hanging down. LEUCHTIE switches off itself after 1-2 minutes if the battery compartment is hanging up, for example on a wardrobe.

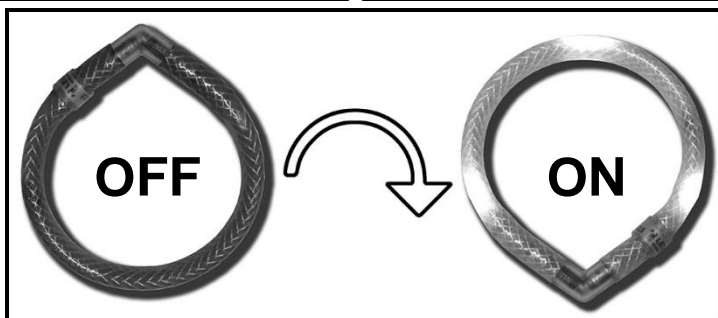

### Battery change

- The operating time using 2 Alkaline batteries type AAAA / LR 61 is about 50 hours.
- Please use batteries of the brand Alkaline!
- Please remove both empty batteries immediately!
- Please remove both batteries in case of longer disuse (e. g. in the summer).


If your LEUCHTIE begins to lose its brightness, or if it switches itself off shortly after switching on, the batteries are exhausted and need **immediate** replacing.

Replace the batteries in a **clean, dry** place and make sure that the LEUCHTIE is also **clean** and **dry**. Always replace **both** batteries at the same time.

Your hands and the LEUCHTIE should be **grease-free**.

### Exchange of batteries

- Pull the light tube and the angle apart while twisting the joint slightly.
- Remove the both old batteries from the ends of the tube (use pliers if necessary).
- Place the new batteries into the light tube while observing the correct polarity as per illustration: The side with the LEUCHTIE label goes with the negative pole of the battery ahead and the side without the label goes with the positive pole ahead into the light tube.
- Push the angle back into the ends of the tube. Take care that the spring clip is centred in the angle.
- Test that the LEUCHTIE is working by pointing the battery compartment down.

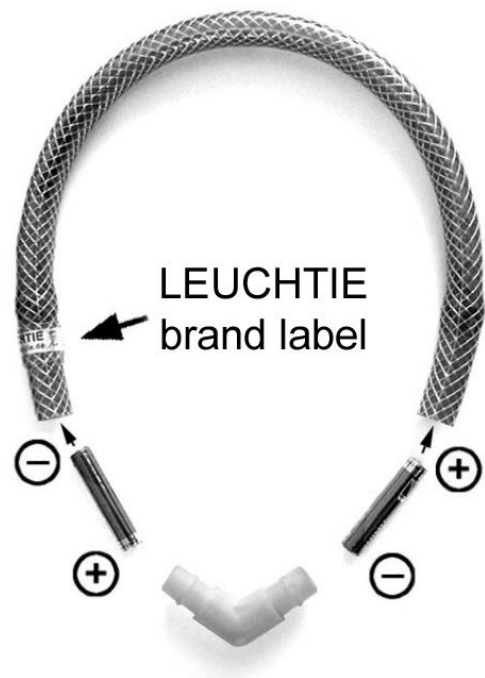

**If LEUCHTIE is not working, please read information on page 3.**

Do not recharge, dismantle, heat or hot-wire the batteries provided.

Batteries can be fatal if swallowed. Keep all batteries in a safe place, inaccessible to children and dogs. If a battery is swallowed seek medical assistance from your vet or doctor immediately.

Dispose of used batteries responsibly and in accordance with your local recycling regulations.

## Troubleshooting

If your LEUCHTIE is not working correctly, check the following:

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
Defective contact	The connection spring isn't on the right place in the angle.	Pull off the angle from the light tube by doing a slight twisting motion and put the connection spring into the right position (centred in the angle), then reassemble. Put some contact spray on the battery poles.
	Dirty connections	Put some contact spray on battery poles and spring clip.
No function	Batteries are inserted incorrectly	Fill in the batteries correctly - see battery change (page 2).
	Batteries are consumed - your LEUCHTIE may have been stored incorrectly and remained lit for an extended period.	Both batteries need <b>immediate</b> replacing – see battery change (page 2) Replace flat or weak batteries to avoid battery leaks!

## Replacement parts

If necessary you can order replacement parts from your LEUCHTIE supplier or directly from the LEUCHTIE distributor.

## Warranty

This product is covered by manufactures warranty for the period of 2 years from the date of purchase. During this period, we will repair or replace any defective parts due to faulty material or manufacture. The warranty does not cover any defects resulting from misuse, leaking batteries, from normal wear and tear, or due to not following the above care and safety instructions. Ulterior claims are excluded, the liability for consequential damages isn't assumed.

Any unauthorized tampering with the electronics will void the warranty. The warranty is not extended through repair or part exchange.

All enquiries regarding claims should be addressed to your LEUCHTIE Supplier.

Made in Germany by:

trends and more GmbH  
Hammerweg 107  
D- 92637 Weiden

Tel. +49 961 470 8 440  
URL: [www.leuchtie.de](http://www.leuchtie.de)  
E-Mail: [info@leuchtie.de](mailto:info@leuchtie.de)

UST-ID:  
WEEE:

DE 265028845  
DE 23706136

## General care and safety

- Use the LEUCHTIE only for its intended purpose.
- Before the first use, make sure the LEUCHTIE is not too tight around the dogs neck, and that it can be removed easily. If you have purchased a LEUCHTIE that is too tight, and you cannot remove it, then you can pull it apart as per battery replacement instructions on page 3.
- Do not attach a lead to the LEUCHTIE and avoid holding your dog by the LEUCHTIE. Too much force on the LEUCHTIE could cause the battery and other parts to fall out and get lost.
- The LEUCHTIE is not a dog-toy. If it is used inappropriately (for example being thrown, chewed, tugged etc.) the LEUCHTIE could be irreparably damaged and or parts become lost. If a battery or any other part are swallowed by your dog, you should seek advice from your vet immediately.
- Do not let your dog play with the LEUCHTIE.
- Should your LEUCHTIE get accidently damaged replace the required parts before any further use.
- During cleaning the LEUCHTIE or changing batteries avoid getting water inside. When fully closed, the LEUCHTIE is well protected from moisture. If you see moisture inside, remove the battery compartment and let everything dry out overnight.
- Do not expose the LEUCHTIE to temperatures in excess of 60°C.
- Never dry the LEUCHTIE in a microwave. Microwave radiation will destroy the electronics.
- Clean the LEUCHTIE in warm water (maximum 60°C) with a little soap or gentle detergent.

## Cleaning

Clean the LEUCHTIE in warm water and soap or mild detergent if required. Do not use aggressive or solvent-based cleaners. Be careful to avoid moisture getting into the battery compartment. If this happens accidentally, take the light apart and allow it dry out overnight.



This product meets the requirements of the Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of hazardous substances in electrical and electronic equipment.



Please protect the environment and recycle this product. The product is labeled with the symbol of the crossed out waste bin, which means that it should be dropped off free of charge at a local collection point for recycling at the end of its useful life. Disposal in the regular waste is not permitted.



The used batteries cannot be disposed of with the regular household waste! Please dispose of them via the appropriate commercially available containers or drop them off at public collection points.